



List of Storage Features

► 5-seat models

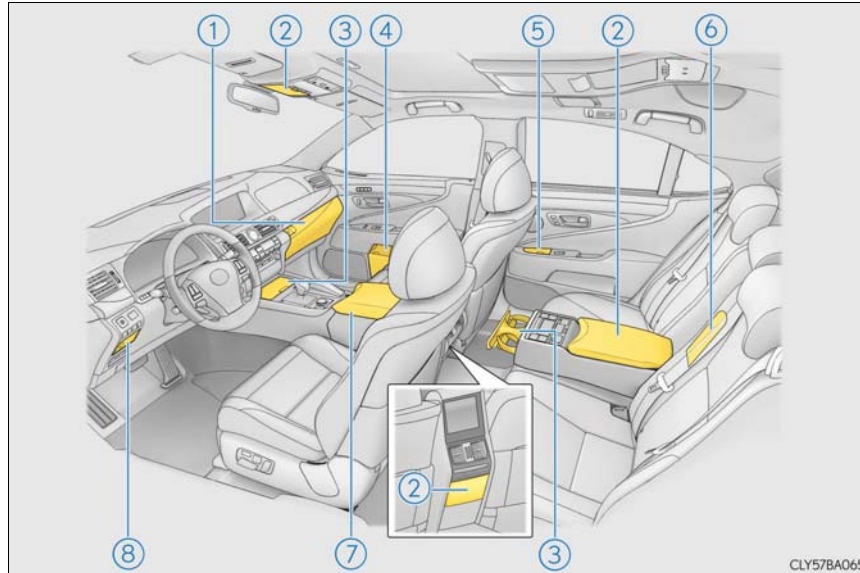

- | | |
|---|--|
| ① Glove box | ⑥ Cool box/auxiliary box (if equipped) |
| ② Auxiliary boxes (if equipped) | ⑦ Console box |
| ③ Cup holders | ⑧ Coin holder |
| ④ Door pockets | |
| ⑤ Auxiliary boxes (if equipped) Ashtrays (if equipped) | |

► 4-seat models

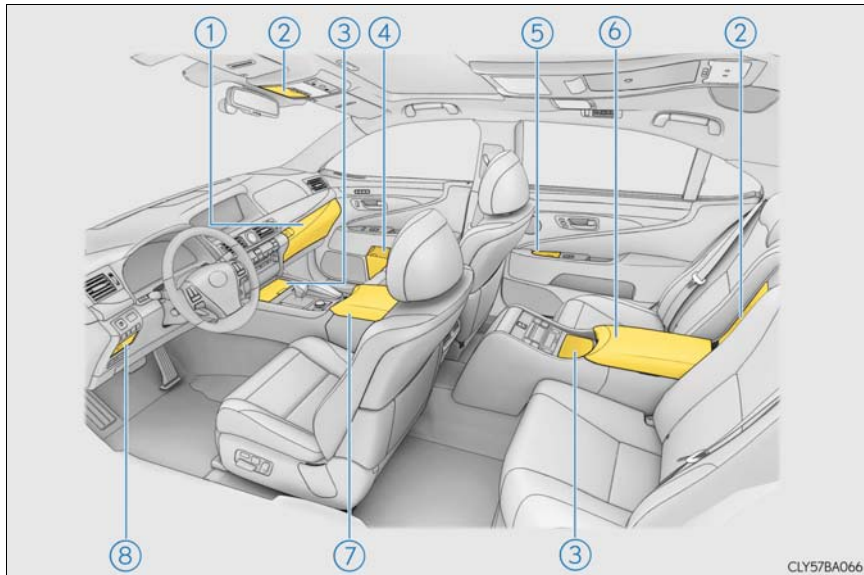


- | | |
|---|--|
| ① Glove box | ⑥ Cool box/auxiliary box (if equipped) |
| ② Auxiliary boxes | ⑦ Console box |
| ③ Cup holders | ⑧ Coin holder |
| ④ Door pockets | |
| ⑤ Auxiliary boxes (if equipped) Ashtrays (if equipped) | |

Door Locks

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switches.


For details the entry function or wireless remote control (→ P.12, 13)

■ Door lock switch

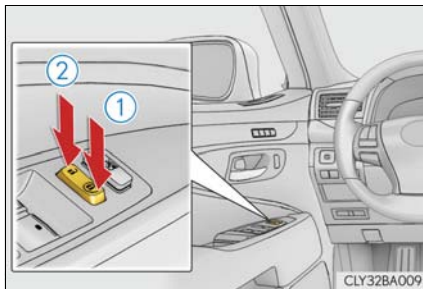


- ① Locks all the doors
- ② Unlocks all the doors

■ Inside lock button

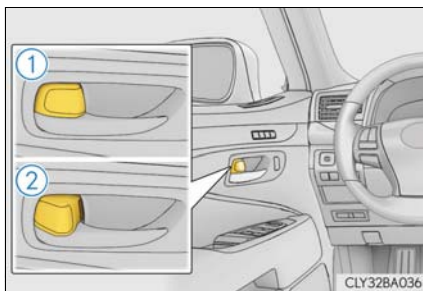

- ① Locks the door
 - ② Unlocks the door
- The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

■ Rear door child-protector lock

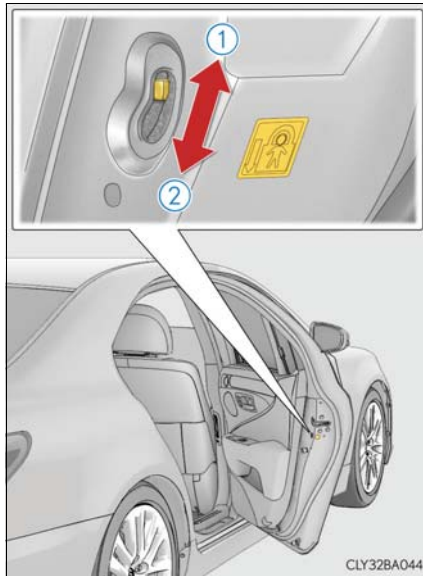

The door cannot be opened from inside the vehicle when the lock is set.


① Unlock

② Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

Power Windows


■ Power window switches

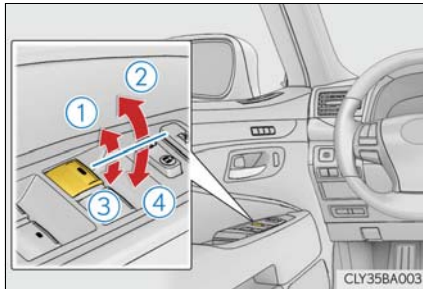

- ① Closing
- ② One-touch closing*
- ③ Opening
- ④ One-touch opening*

*: To stop the window partway, operate the switch in the opposite direction.

■ Window lock switch

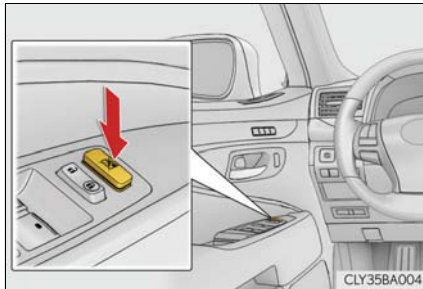


Press the switch down to lock the passenger window switches.

Use this switch to prevent children from accidentally opening or closing a passenger window.

Moon Roof


■ Opening and closing

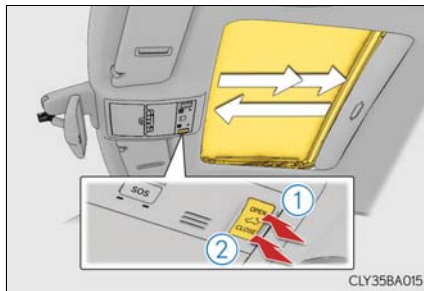

- ① Opens the moon roof*
The moon roof stops slightly before the fully open position to reduce wind noise.
Press the switch again to fully open the moon roof.

- ② Closes the moon roof*
*: Lightly press either of the moon roof switches to stop the moon roof partway.

■ Tilting up and down

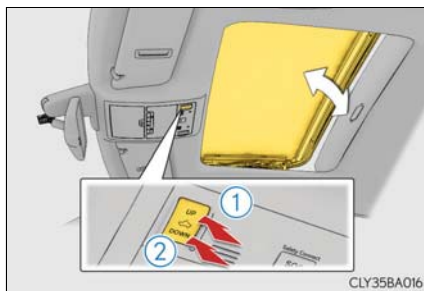


- ① Tilts the moon roof up*
 - ② Tilts the moon roof down*
- *: Lightly press either of the moon roof switches to stop the moon roof partway.

Fuel Tank Cap


■ Before refueling the vehicle

- Close all the doors and windows, and turn the engine switch off.
- Confirm the type of fuel.


■ Opening the fuel tank cap

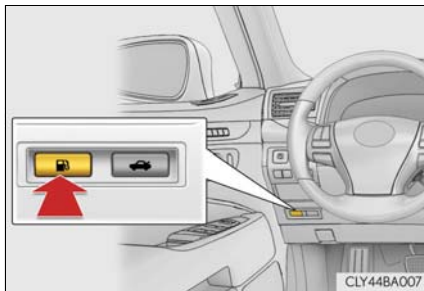

- 1** Press the opener switch.

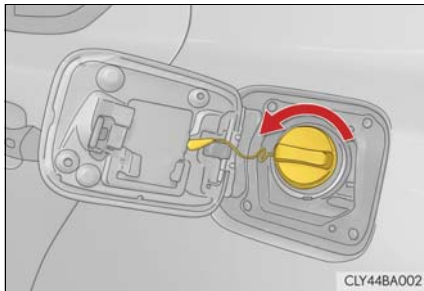

- 2** Turn the fuel tank cap slowly to open.

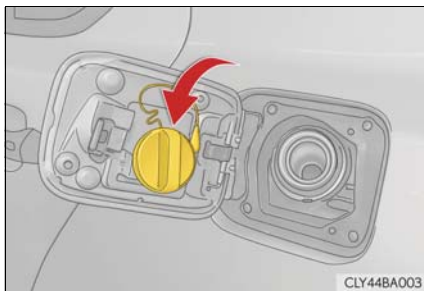


- 3** Hang the fuel tank cap on the back of the fuel filler door.

Hood



- 1** Pull the hood lock release lever.
The hood will pop up slightly.

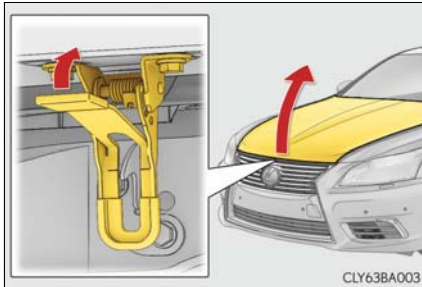

- 2** Pull up the auxiliary catch lever and lift the hood.

Trunk

Opening the trunk

● From inside the vehicle



Press the opener switch.

If the vehicle is equipped with a power trunk opener and closer, the trunk lid automatically opens fully.

● From outside the vehicle

- Entry function
→P.13
- Wireless remote control
→P.12

Trunk easy closer

In the event that the trunk lid is left slightly open, the trunk easy closer will automatically close it to the fully closed position.


Trunk closer switch (vehicles with power trunk opener and closer)



Pressing the switch closes the trunk lid automatically. (A buzzer sounds.)

Pressing the switch while the trunk lid is closing opens the trunk lid again.

Luggage security system

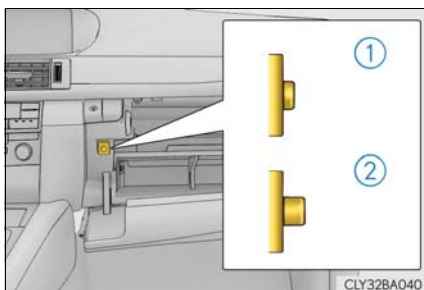

Turn the main switch in the glove box off to disable the trunk opener.

① On

② Off

The trunk lid cannot be opened even with the wireless remote control or the entry function.